


When attaching finished connectors, make sure that they are fully engaged, leaving no gap between the insulators. It is recommended to slightly twist the connectors during mating to ensure proper engagement.




CORRECT Engagement

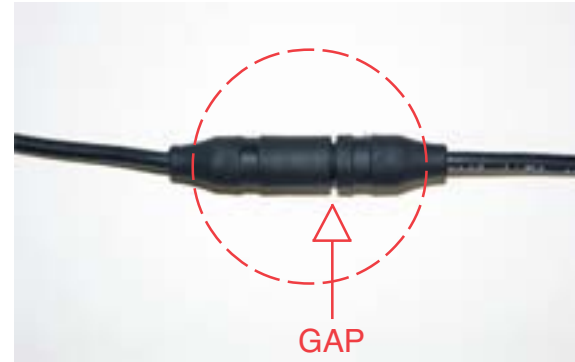


INCORRECT Engagement

Once the connectors are fully assembled and fully engaged it is important to make sure that the cable is properly routed, with no sharp bends or twists. Refer to the cable manufacturers' specification for minimum bending radii.

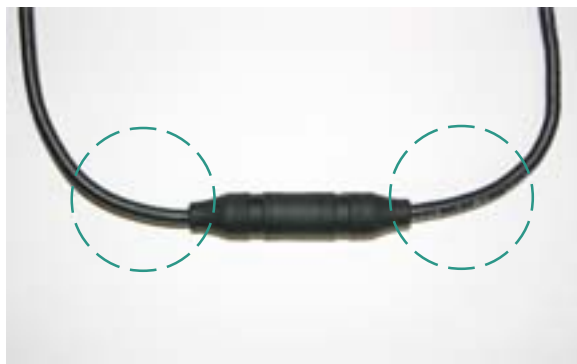

CORRECT Routing of Cable

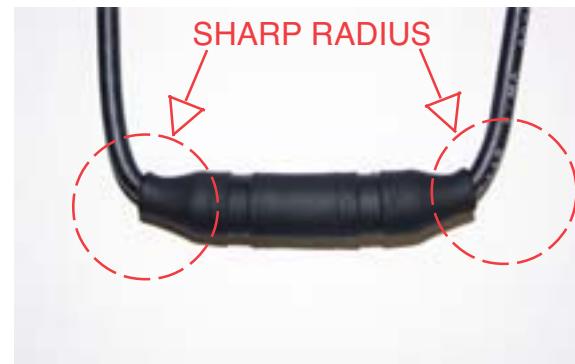

INCORRECT Routing of Cable